



Installing Z3D's 12mm Front Hex Adapter (Fits Team Losi XXT & XXXT)

Packaging:

- 12mm Hex Adapter (Qty. 2)
- Outer Bearing Adapter (Qty. 2)
- Outer Bearing Washer (Qty. 2)

Instructions:

Step 1. Install 3/16 x 3/8 bearings (not included) on both the Hex and round adapter.

Step 2. Insert the *12mm Hex Adapter* on front axle with the fully exposed bearing towards the center of the car, see Figure 1 below.

Step 3. Insert wheel onto the 12mm hex adapter, see Figure 1 below.

Step 4. Insert Outer Bearing Adapter on the front axle with the fully exposed bearing towards the center of the car, see Figure 2 below.

Step 5. Insert *Outer Bearing Washer* on the front axle with the flat surface towards the outside of the car, see Figure 3.

Step 6. Place locknut and tighten, see Figure 4 below. **Note:** Do not overtighten

Tech Tip: I prefer to tighten the wheel nut until snug and back out $\frac{1}{4}$ to $\frac{1}{2}$ turn. This is the perfect amount to make sure you have free bearings and no slop.

Thank you for choosing Z3D!!



Figure 1

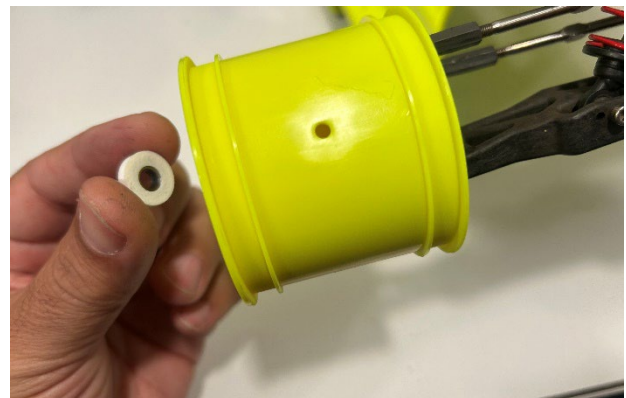


Figure 2



Figure 3



Figure 4